



# WLD-900

## Driver Installation and Setup

Setting up your computer for communication with the WLD is a quick and simple process which should take less than a few minutes. This installation need only take place once on a Windows pc to allow for radio setup and modification.

**STEP 1** - Plug the WLD into a pc using a USB-B style cable. The WLD does not need to be powered on for this stage of installation.

**STEP 2** -Windows should prompt that it has found new hardware. **DO NOT HAVE WINDOWS FIND THE DRIVERS!** Select the option to look for the drivers yourself.

**STEP 3** - Browse to the location where you downloaded the file.

**STEP 4** - Once the folder is selected(WLD USB LINK), click Done, and Windows will pull the drivers out of the file and install them.

You will need to complete Steps 2 through 4 twice for all drivers to successfully be installed.

**STEP 5** - Open "Device Manager" in Windows and go to the COM PORT properties by double-clicking "WLD\_USB\_LINK".

**STEP 6** - Go to the "Port Settings" tab and set.....

Bits per second to ---115,200---

Data bits to ---8---

Parity bits to ---None---

Stop bits to ---1---

Flow Controls to ---None---

You are now ready to communicate with the WLD for radio setup.